



®

HO Scale Structure

WHITE TOWER

933-3030

READ INSTRUCTIONS FIRST

BEFORE ASSEMBLY

Check kit for proper number of parts. Trim off flash from parts by cutting or filing. Where walls butt up to one another, make sure to sand edges to insure a right angle joint with no gap between walls. Plastic cement is recommended for the bulk of assembly.

PAINTING



Basic painting can be accomplished with brush, spray can or airbrush. When brushing, use plastic compatible paints to avoid crazing of the plastic. Painting may be done before, during or after assembly.


The first area to consider is the inside of the building, the inside walls. If no inside partitioning or detail is added, there is no reason to highlight the interior. One way to eliminate this stark, empty look is to paint the inside of the wall flat black. Make sure that whatever you put the building on is also colored flat black. Decide if you want to paint the walls or leave unpainted. If left unpainted, we recommend that you spray the entire building with a clear flat finish. This will eliminate that shiny, "plastic" look. The exterior walls are white with the trim being a stainless steel color. The base is black. The roof and interior faces of the walls above the roofline are also black. Weathering is not recommended because these buildings were usually maintained in like-new condition.

ASSEMBLY


Install "Glass" to all doors and windows. Carefully glue the walls together and to the base, being sure to keep the walls square with each other. Assemble the tower, again being sure to keep the walls square. Glue the tower roof to the tower walls. Attach the roof to the building. Insert the tower to the proper place on the building, paying close attention to the notch in the roof. Paint the top and front edges of the awnings. When dry, cut out the awning covers on this sheet and, with a little white glue, glue the covers to the plastic awnings. Attach the awnings to their proper place on the building.

A

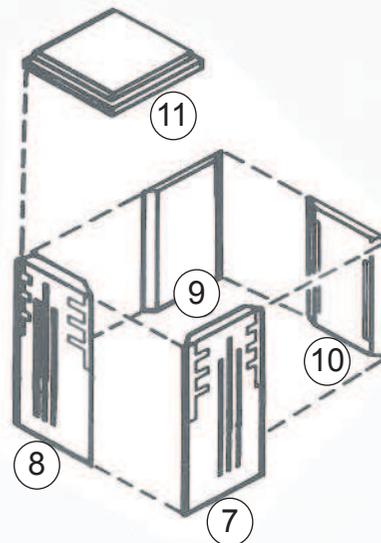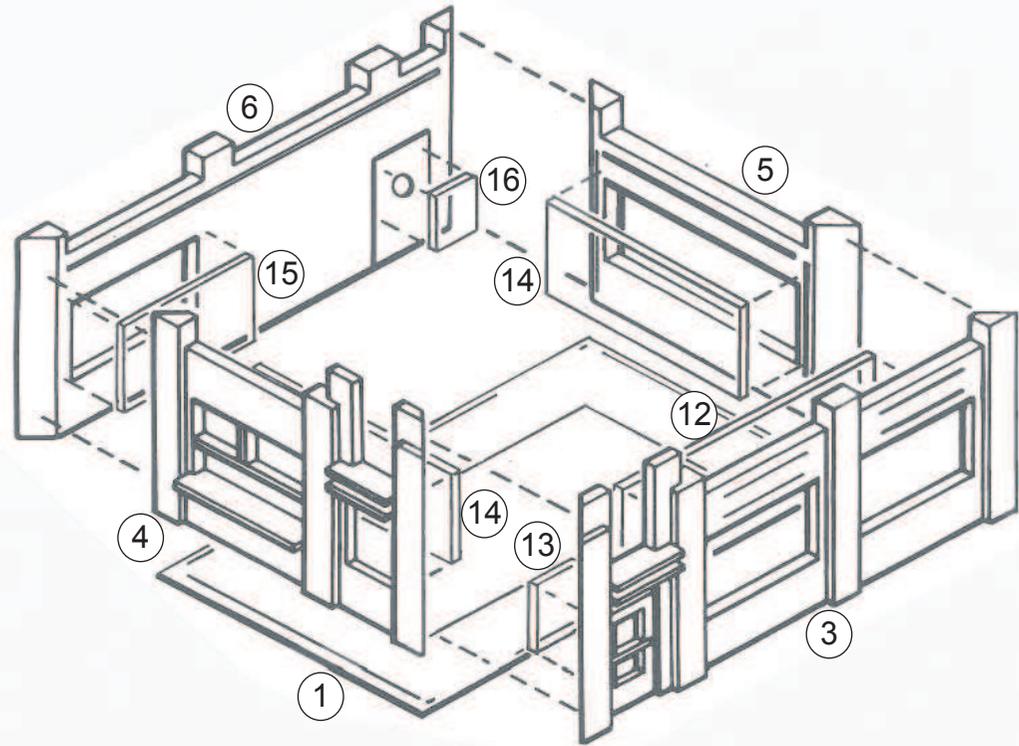

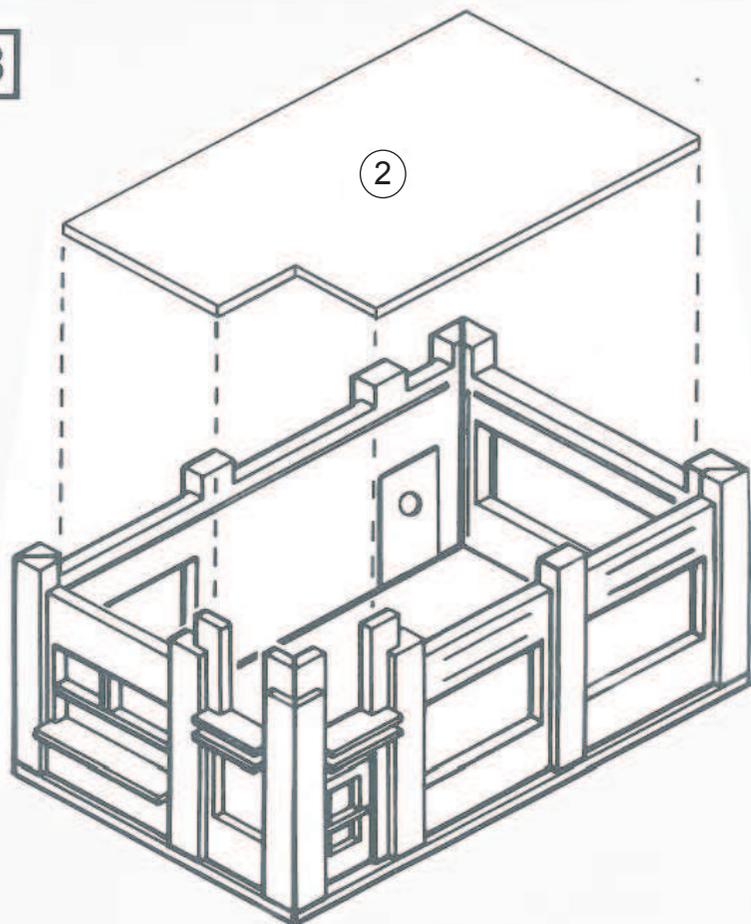B

2

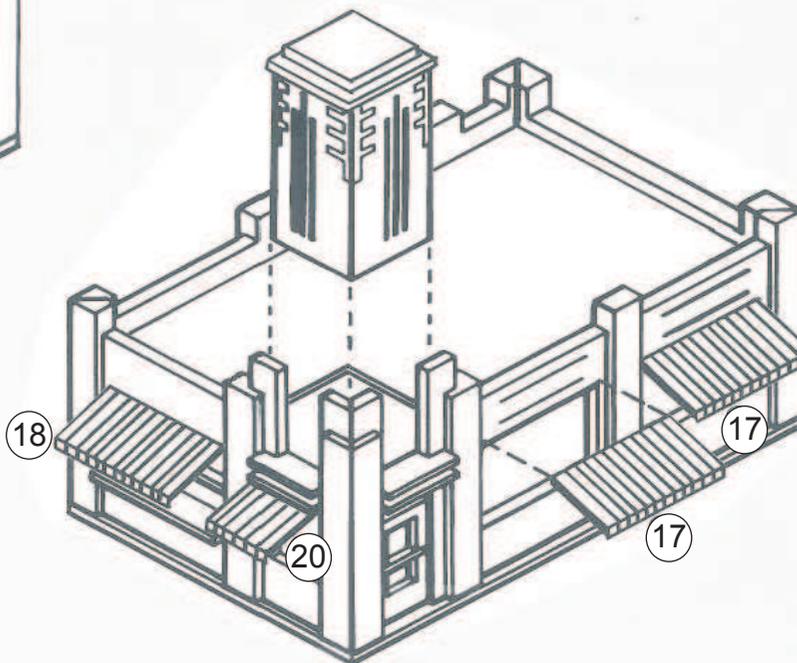


18

17

20

17

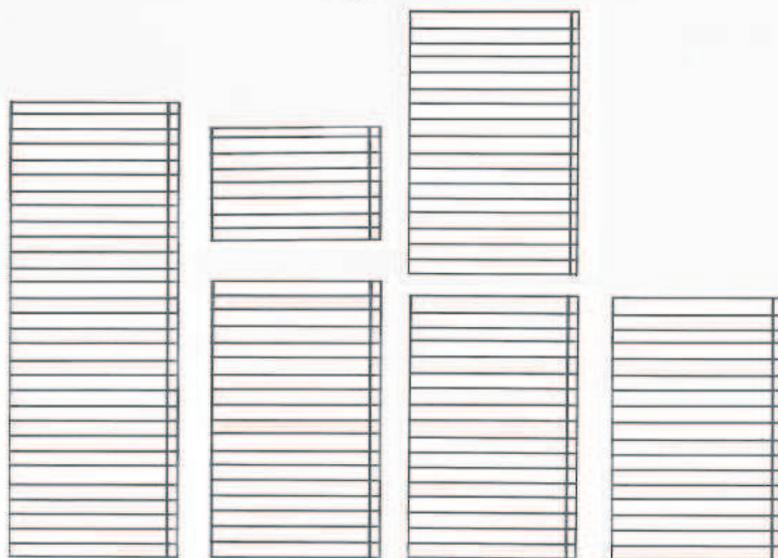**DECALING**

1. After cutting out the decal, dip in water for 10 seconds, remove and let stand for 1 minute. Slide decal onto surface, position and then blot off any excess water.

2. Lightly brush Micro Sol® on top. This will soften the decal allowing it to conform to irregular surfaces. **DO NOT TOUCH DECAL** while wet!

3. When the decal is thoroughly dry, check for any trapped air bubbles. Prick them with the point of a small pin or hobby knife blade and apply more Micro Sol®.

933-3030
WHITE TOWER

PARTS LIST

1. Base
2. Roof
3. Front Wall
4. Left Wall
5. Right Wall
6. Back Wall
7. Tower Wall Front Side
8. Tower Wall Left Side
9. Tower Wall Back Side
10. Tower Wall Right Side
11. Tower Roof
12. "Glass" - Front Wall
13. "Glass" - Front Door
14. "Glass" - Left and Right Walls
15. "Glass" - Back Wall
16. "Glass" - Back Door
17. Awnings - Front and Back Wall
18. Awning - Large Window Left Wall
19. Awning - Window Right Wall
20. Awning - Small Window Left Wall

Visit our Web-site at waltherscornerstone.com for more ideas.

© 2011 Wm. K. Walthers, Inc. Milwaukee, WI 53218 I-3030